



Information

Diagnostic and Utility Codes for all units

5 Series

As 4 Series except:

Hold BACK on power up: reboot DSP

78B4: Make Program Card (512k card required)

DC1048 and Ti1048

Hold down the [OK] key on start-up:

Battery Fail (Leaves alignment and security): COM GPI, SYS, OK

Program flash device for test: UP, SYS, UP, SYS

Alignment: UP, SYS, DN, OK

Step to next channel: OK

Inc. parameter gain: UP

Dec. parameter gain: DN

Save current settings: SYS

Exit without saving: GPI

4 Series

Hold down the [MENU] key on start-up:

4B13: Battery Fail (Leaves alignment and security)

AB12: Generator+

A431: Alignment

ABBA: LED/Switch Test

341B: Clear Xover (Full Range)

1AB4: Make Program Card (512k card required)

2BB2: Make Program and Preset Card (512k)

3AB4: Make Preset Card (256k & 512k)

81D7: Load Jump Flash

2121: Security Access¹

CAUTION!!

Enabling the Alignment mode will output +18dB at 1kHz on ALL outputs !

Disconnect from PA system during this test!

DP226 [and Old DP428 Codes]

Hold down the [MENU] key on start-up:

6B13: Battery Fail (Leaves alignment and security)

A456: Alignment

ABCD: LED/Switch Test

81D7: Load Jump Flash

¹ Contact XTA for complimentary break code for 4 Series security.



561B: Clear Xovers to Flat
 5AB6: Make Program Card (256k & 512k)
 2BB2: Make Program and Preset Card (256k & 512k)
 3AB4: Make Preset Card (256k & 512k)
 152A: Outputs 100Hz @ -40 (DP226 Only)

DP224

Hold down the [MENU] key on start-up:

31B13: Battery Fail (Leaves Security and Alignments)

A4332: Alignment

4A311: Clear Xovers to Flat

1332A: Outputs 100Hz @ -40dB

2BB22: Make Program and Preset Card (256k & 512k)

4AB12: Make Program Card (256k & 512k)

3AB42: Make Preset Card (256k & 512k)

DP324

Alignment: A456 (INP A, LIM A, DEQ B, GATE B)

(Inject +18dB into B and align to lowest number, then do A followed by all outputs, which will be driven from A)

Battery Fail: 6B13 (GATE B, INP B, DEQ A, COMP A)

Card Copying Procedures

Program Only: 5AB6 (DEQ B, INP A, INP B, LIM B) (256k & 512k)

Preset Only: 3AB4 (COMP A, INP A, INP B, LIM A) (256k & 512k)

Program and Preset: 2BB2 (GATE A, INP B, INP B, GATE A) (256k & 512k)

Preset Only from User Mems: 6663 (GATE B, GATE B, GATE B, COMP A)

Set Option Code (Complete Access): AB12 (INP A, INP B, DEQ A, GATE A)

(Start with the 'Next' key and work around the unit in button order to open up full TC's etc. Note: 'Enter' key confirms and 'Quit' key quits.)

Next: 0000.0000.0000.0001 = Opens up all release time stops

Back: 0000.0000.0000.0010 = Turns on memories storing bypass status

Quit: 0000.0000.0000.0100 = Turns on memories storing user mode status

Security Set-up: 8713 (LIM B, COMP B, DEQ A, COMP A)

(Hold down [ENTER] and turn on to access Security set-up)

CAUTION!!

Enabling the Alignment mode will output +18dB at 1kHz on ALL outputs !

Disconnect from PA system during this test!